 
 


1

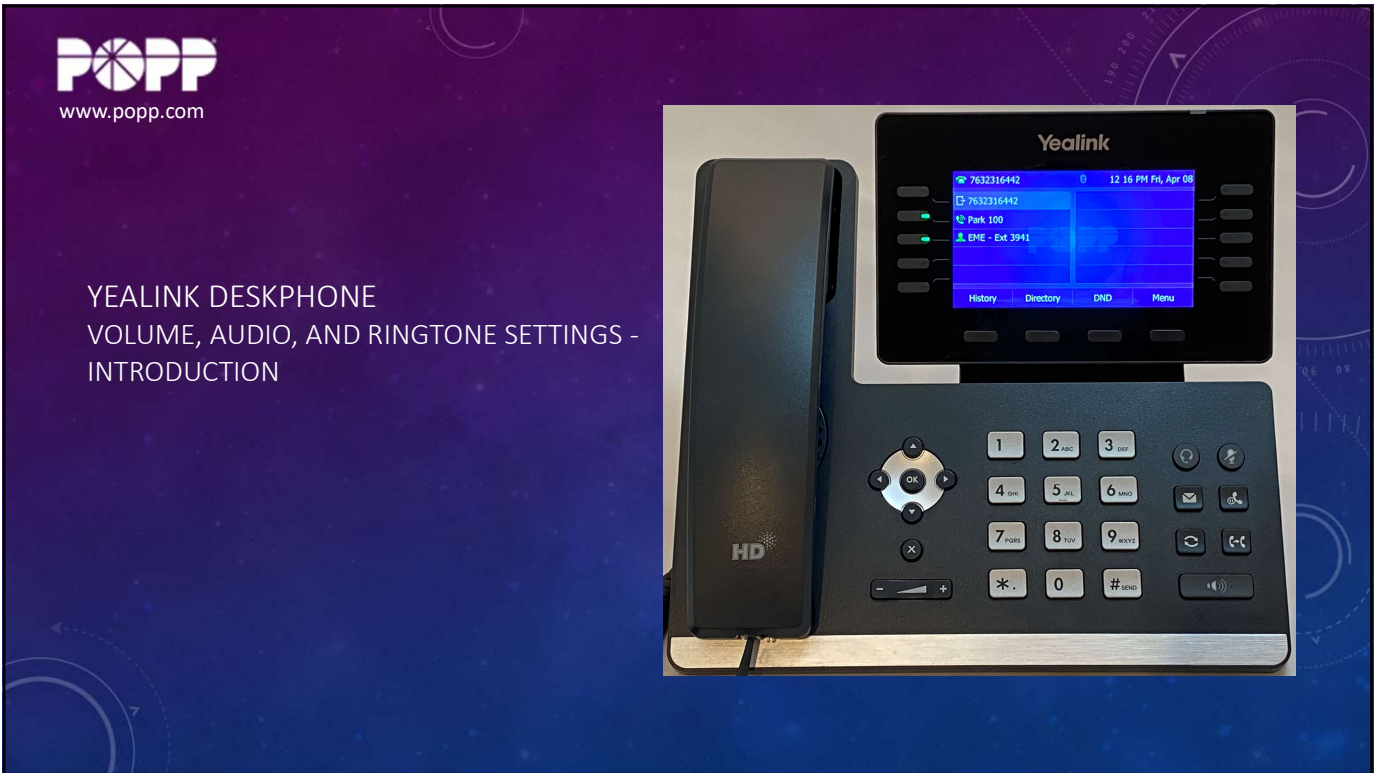


2

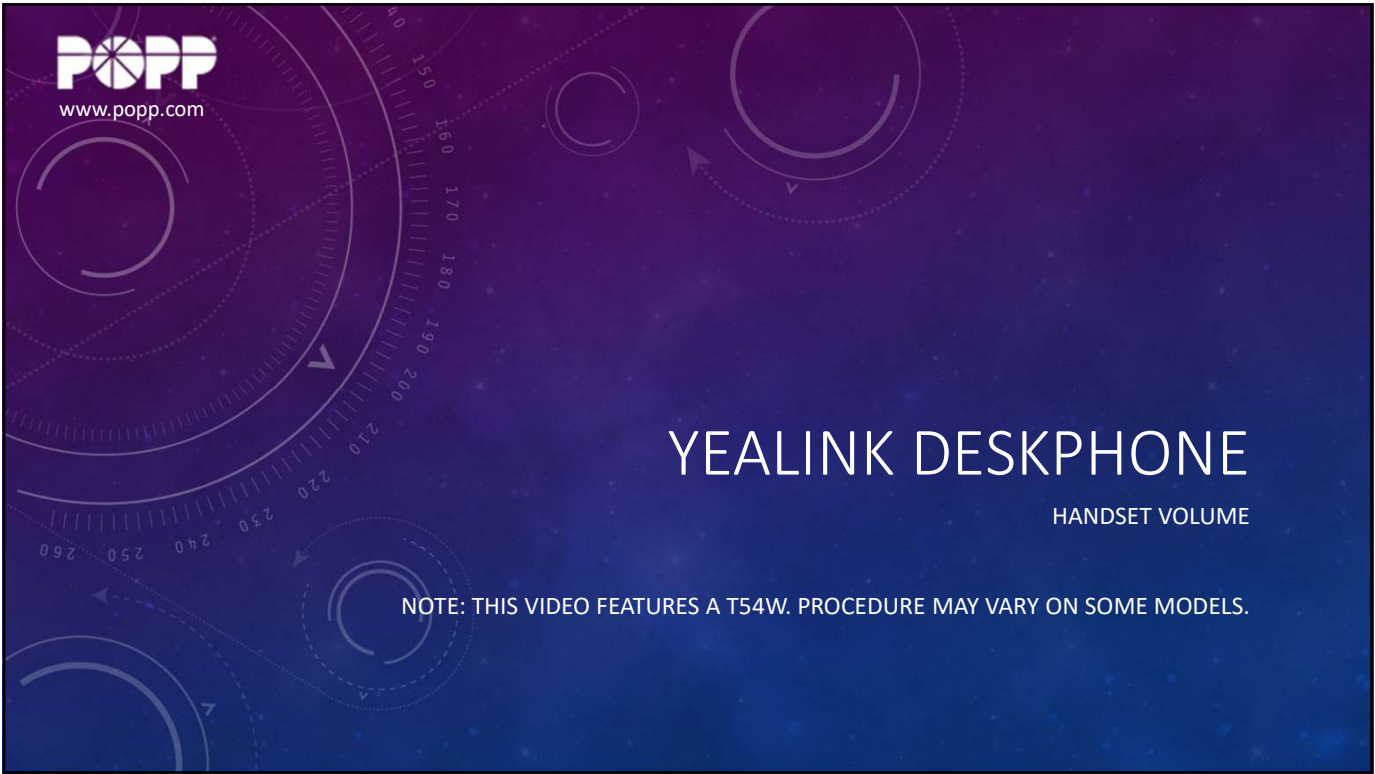

3




4

  
www.popp.com

# YEALINK DESKPHONE HANDSET VOLUME

For more training videos, visit  
[www.popp.com/support](http://www.popp.com/support)



5

# YEALINK DESKPHONE

## SPEAKER VOLUME

NOTE: THIS VIDEO FEATURES A T54W. PROCEDURE MAY VARY ON SOME MODELS.

6



YEALINK DESKPHONE  
SPEAKER VOLUME

- To adjust the speaker volume:
  - Press the Speaker button



7

YEALINK DESKPHONE  
SPEAKER VOLUME

- To adjust the speaker volume:
  - Press the Speaker button
  - Press or hold the plus (+) or minus (-) on the volume button
- This adjustment can also be made during a phone call while using the speakerphone



8

YEALINK DESKPHONE  
SPEAKER VOLUME

For more training videos, visit  
[www.popp.com/support](http://www.popp.com/support)




9



YEALINK DESKPHONE  
HEADSET VOLUME

NOTE: THIS VIDEO FEATURES A T54W. PROCEDURE MAY VARY ON SOME MODELS.


10



www.popp.com

### YEALINK DESKPHONE HEADSET VOLUME

- To adjust the headset volume:
  - Press the Headset button



11



www.popp.com


### YEALINK DESKPHONE HEADSET VOLUME

- To adjust the headset volume:
  - Press the Headset button
  - Press or hold the plus (+) or minus (-) on the volume button
- This adjustment can also be made during a phone call while using a headset




12




  
www.popp.com

YEALINK DESKPHONE  
HEADSET VOLUME

For more training videos, visit  
www.popp.com/support



13

  
www.popp.com

YEALINK DESKPHONE

MUTE OUTBOUND AUDIO

NOTE: THIS VIDEO FEATURES A T54W. PROCEDURE MAY VARY ON SOME MODELS.

14


  
www.popp.com

### YEALINK DESKPHONE MUTE OUTBOUND AUDIO

- To mute outbound audio:
  - Press the Mute button




15

  
www.popp.com


### YEALINK DESKPHONE MUTE OUTBOUND AUDIO

- To unmute:
  - Press the Mute button again



16




  
www.popp.com

YEALINK DESKPHONE

MUTE OUTBOUND AUDIO

For more training videos, visit

www.popp.com/support



17

  
www.popp.com

YEALINK DESKPHONE

RING VOLUME

NOTE: THIS VIDEO FEATURES A T54W. PROCEDURE MAY VARY ON SOME MODELS.

18


  
www.popp.com

### YEALINK DESKPHONE RING VOLUME

- To adjust the ring volume (with the phone idle):
  - Press or hold the plus (+) or minus (-) on the Volume button
  - The sample ring tone will indicate the new ring volume




19

  
www.popp.com

### YEALINK DESKPHONE RING VOLUME

For more training videos, visit  
[www.popp.com/support](http://www.popp.com/support)



20



21



22






www.popp.com

### YEALINK DESKPHONE CHANGE EXTERNAL RINGTONE

- Use the navigation keypad to select:
  - Basic
  - Sound
  - Ring Tones




23




www.popp.com

### YEALINK DESKPHONE CHANGE EXTERNAL RINGTONE

- Use the navigation keypad to select:
  - **Common** - to set default ring tone for calls to all lines on the phone
  - **Line** - to set a different ring tone for a specific line
- Press the [OK] button

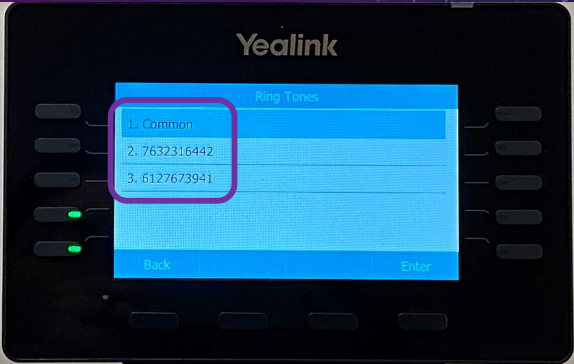


24



www.popp.com

### YEALINK DESKPHONE CHANGE EXTERNAL RINGTONE

- The selected radio button denotes the current ring tone
- Use the navigation keypad to scroll through the options and sample each ring tone

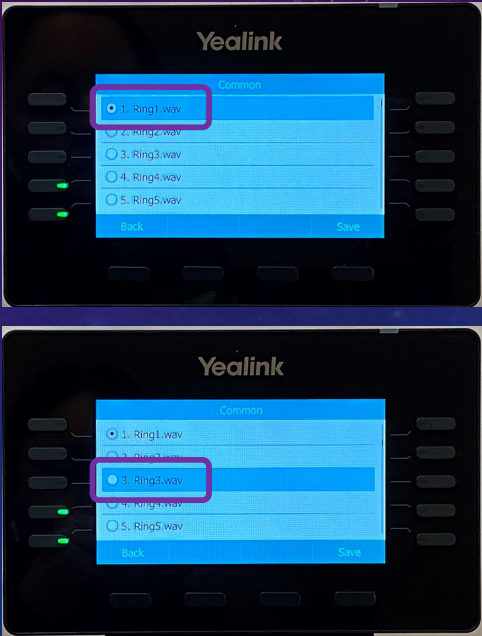


25




www.popp.com

### YEALINK DESKPHONE CHANGE EXTERNAL RINGTONE

- Press the [Save] softkey to set the desired ringtone

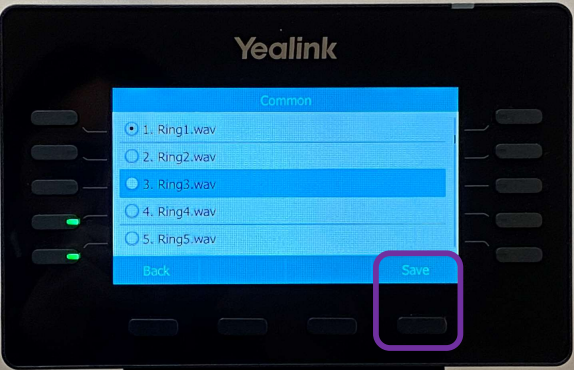


26




www.popp.com

### YEALINK DESKPHONE CHANGE EXTERNAL RINGTONE

- Lift the handset and hang up to exit the menu




27



www.popp.com

### YEALINK DESKPHONE CHANGE EXTERNAL RINGTONE

For more training videos, visit  
[www.popp.com/support](http://www.popp.com/support)



28